



Step 1.

Remove the cover from its carry bag and lay out on the ground next to the passenger side of your vehicle, ensuring that the soft lining is facing upwards and that the front of your cover (with the third window) is facing forward. To prevent the cover getting dusty or dirty we recommend placing a groundsheet on the floor first.



Step 2.

Take hold of the white beading at the front corner of your cover, which should be nearest to your vehicle, and begin to feed the beading in to the aluminium awning rail which runs along the passenger side of your vehicle. Start at the rear and feed it along until the cover is attached from front to back. The cover should hang down with the soft lining facing out.



Step 3.

Open the front passenger door and stand on the step, then gather as much of the cover as possible and sweep it across the roof of your vehicle. Go around to the driver's side and pull the cover across so that it doesn't fall off.

In windy conditions you may need assistance of a second person, or park so that the wind is blowing across the roof from the passenger side.



Step 4.

Raise the roof 12" or so at the front so that there is a small opening at the rear. Pull the cover gently down so that the front two corners of the roof are inside the front two corners of the cover.

It is important to get this right to ensure correct fit of your cover. Once the front two corners are in place, pull the rear corners of the cover over the rear corners of your roof.




Step 5.

Once all four corners are correctly in place, continue raising the roof as per your manufacturer instructions. When the roof is fully raised, the cover will fit nicely along the passenger side and the driver's side should be hanging down with the 5 buckle fasteners.



Step 6. (no fixed awning)

If your vehicle is not fitted with a fixed roll out awning, simply undo the 5 clips, slide them along the awning rail, clip them all into place and gently tighten the adjustable straps so that the cover first neatly all the way along. Do not over tighten as you do not want to exert excessive pressure on the roof.

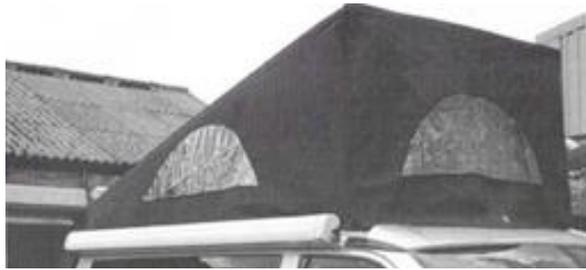

Step 6. (with fixed awning)

If your vehicle is fitted with a fixed roll out awning, undo the two clips at the front and one at the rear, slide the front two into the aluminium awning rail from the front, attach them to the clips on the cover and tighten (do not over tighten straps). Slide the rear clip into the aluminium awning rail at the back and attach it to the rear strap before tightening (do not over tighten). Each of the clips have a metal hook which has been designed to clip into the rear backing plate of the 'fixed awning'. So, the remaining two straps can be secured to the backing plate of the fixed awning if so desired.

Alternatively, you can use the Velcro tabs which have been attached to the rear of each strap and a corresponding piece with a sticky back Velcro also enclosed. These can be used to stick the Velcro to the side of your vehicle behind the fixed awning and the two centre straps can then be attached to them to prevent flapping.



Step 7.

Two further straps are fitted to the rear of your vehicle roof cover. If necessary, these can be used to further fix your cover to your vehicle. These straps may either be passed around the inside of the rear door hinge of your vehicle, or alternatively, if your vehicle is fitted with a rear door mounted bicycle carrier, they can be fixed to a suitable area of that.

Your vehicle roof cover will fit securely to your vehicle providing increased insulation and protection to the roof bellows. To remove the cover simply follow the instructions in reverse, remembering to undo all clips prior to lowering the roof, then remove the rear corners first for ease of removal.